


challenge®

MODEL NO. TX-TF29CR GREY TOWER FAN W/REMOTE INSTRUCTION MANUAL

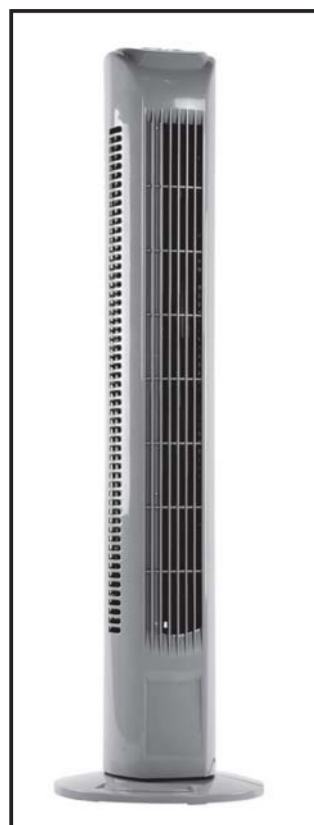

Important-Please read these instructions carefully before first using this product and retain for future reference.

Thank you for choosing a CHALLENGE tower fan. It is a remarkably versatile product which offers a choice of air-circulation for summer comfort. This tower fan has been designed and manufactured to high standards of engineering and with proper use and care, as described in this leaflet, this appliance will give you years of useful service. Please read these instructions carefully.

GENERAL CARE AND SAFETY GUIDE

- Use only the voltage specified on the rating plate of the fan.
- Do not cover or restrict airflow to the inlet or exhaust grilles in any manner as the appliance may overheat and become a fire risk.
- NEVER cover the fan : this may cause fire.
- Do not block air inlets or outlets in any manner. Check the openings from time to time for accumulated dust.
- Ensure long shag carpet does not obstruct airflow under the unit.
- Do not place appliance close to a radiant heat source.
- Do not operate in areas where gasoline, paint or other flammable liquids are used or stored.
- Do not insert or allow foreign objects to enter any ventilation or exhaust opening, as this may cause an electric shock, fire or damage to the appliance.
- Do not operate any appliance with a damaged cord, plug or after the appliance malfunctions or has been dropped or damaged in any manner. Return to a qualified electrical person for examination, electrical or mechanical adjustment, service or repair.
- This appliance is intended for household use only and not for commercial or industrial use.
- Use this appliance only as described in this manual. Any other use is not recommended by the manufacturer and may cause fire, electric shock or injury.
- Do not use abrasive cleaning products on this appliance. Clean with a damp cloth (not wet) rinsed in hot soapy water only. Always remove plug from the mains supply before cleaning.
- Do not connect the appliance to the mains voltage until completely assembled and adjusted.

1

- Switch off and use handles where provided when moving.
- Always operate on a flat horizontal surface.
- Do not remove plug from power socket until the appliance has been switched off.
- Do not remove plug from power socket by pulling flex - always grip plug.
- Always unplug appliance when not in use.
- Do not allow cord to come in contact with heated surfaces during operation.
- Do not twist, kink or wrap the cord around the appliance, as this may cause the insulation to weaken and split.
- Do not run cord under carpeting, through rugs or runners etc. Arrange cord away from high traffic areas so that it will not be tripped over.
- Always ensure that all cord has been removed from any cord storage area.
- Always keep the fan out of the reach of children.
- Children should be supervised to ensure they do not play with the appliance.
- Do not use this appliance in the immediate surrounds of a bath, a shower or a swimming pool or other liquids.
- Do not use this appliance outdoors, or on wet surfaces. Avoid spilling liquid on the appliance.
- Always switch off the fan at the controls and at the power outlet then unplug fan from the power outlet when not in use.
- Important-This fan is intended for floor use only. Do not mount on ceiling or walls.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or a similarly qualified person in order to avoid a hazard.
- Do not operate the fan with wet hands.
- Do not operate the fan near to curtains or any other fabric which could be sucked into the fan unit.


2

- The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

3

KNOWING YOUR MACHINE

- A. CONTROL PANEL
- B. MAIN BODY
- C. SCREW
- D. REAR BASE
- E. FRONT BASE
- F. POWER CORD
- G. LED PANEL
- H. REMOTE CONTROL
- I. MODE BUTTON
- J. OSCILLATION
- K. TIMER SETTING
- L. ON/SPEED CONTROL
- M. OFF

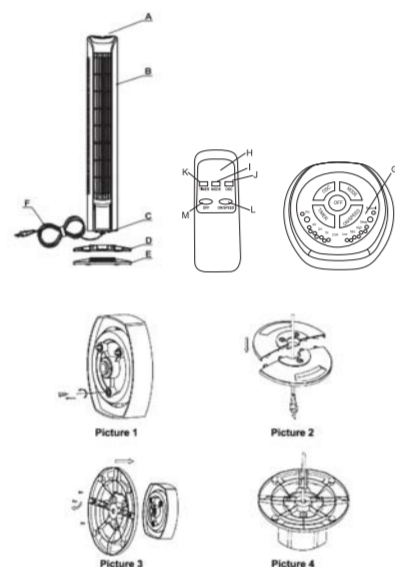

ASSEMBLY OF BASE

1. The product is divided into three parts - main body, front and rear base for transportation.
2. Holding the main body in upside down.
3. Take the screws (C) from the packaging (Picture 1).
4. Tidy up the power cord to avoid any damage during the base assembly.
5. Put the front base (E) to the bottom front part of body.
6. Assemble the rear base (D) and ensure four cylinder hooks on the base are fully inserted to the front base (E).
7. Adjust the base to ensure the slot for the power cord is correctly positioned for the power cord routing (Picture 3).
8. Fix the base to the main body with three screws and ensure the base is fixed securely.
9. Turn the fan back to normal orientation to stand on the floor.
10. Put the power cord into the slot on the base (Picture 4). Ensure no conflict with the main body.

4

OPERATING INSTRUCTIONS

1. Set the appliance on a dry, level and sturdy surface.
2. Plug the appliance into the mains.

ON/OFF, SPEED SELECTION

1. To turn on the fan, press "ON/SPEED" (L). And press again, the fan will start to operate in Low / Middle / High speed setting.
2. Continue to press "ON/SPEED" (L) to select the desired speed.
3. To turn off the fan, press the "OFF" (M) control knob.

OSCILLATION

1. To have oscillation, press oscillation knob "OSC" (J) once on the top of the fan body. The fan will start oscillation, and the rotating angle is approx 90°.
2. To stop the oscillation, press oscillation knob "OSC" (J), then the fan will stop oscillation.

TIMER FUNCTION

1. The fan is equipped with a timer that allows you to set its length of operation from 0.5h to 7.5h.
2. Press "TIMER SETTING"(K) to start the timer mode and continue to press until the desired time is reached.
3. Each LED indicates a time period. When two or more LED's are illuminated the time needs to be added. E.g. 2H and 1H illuminated will give a 3 hour timer.

AIR FLOW SELECTION MODES

1. Normal sets a constant air flow at the currently selected speed.
2. Natural will constantly cycle through high, medium and low speeds.
3. Sleep will constantly cycle through the current selected, and lower than speeds, reducing by one speed at each 30 minute interval, until low is reached whereby it will remain on low constantly.

5

NOTE FOR REMOTE CONTROL

1. The remote control will work at a distance of up to roughly 5 meters, and up to an angle of 40° from either side of the control panel.
2. Avoid direct sunlight onto the fan as this may affect the operation of the remote control.
3. At end of life, remove the remote control battery before disposal.

BATTERY REPLACEMENT

1. Remove the battery cover from the remote control.
2. Replace with 2 pieces UM - 4 "AAA" / R03 battery.
3. Carefully close the battery cover.

NOTE ON BATTERY

1. To prevent the risk of leakage or explosions, never recharge the battery, apply heat or take them apart.
2. When the unit is not going to be used for a long period, remove the remote battery to avoid battery leakage.
3. If the battery has leaked, throw it away. Thoroughly clean the battery compartment with a dry cloth.

CLEANING AND MAINTENANCE

Your fan requires little maintenance and contains no user serviceable parts. Do not attempt to dismantle the Fan Motor body yourself. The fan is permanently lubricated and will not require additional lubrication.

6

- DO NOT use the fan near open windows as any spraying with rain may cause an electrical hazard.
- DO NOT use fan near curtains, plants, etc.
- DO NOT operate in the presence of explosive and / or flammable fumes.
- DO NOT place fan near any open flame, cooker or other heating appliance.
- DO NOT operate any appliance with a damaged cord, plug, or after the appliance has malfunctioned or has been dropped or damaged in any manner. Return instead to a qualified engineer for examination, service or repair.
- DO NOT allow the cord to overhang a table or worktop.
- To disconnect, grip plug and pull from wall outlet NEVER pull on the cord.
- Always use on a dry surface.
- This product is intended for household use only and not for commercial or industrial use.
- Disconnect fan before cleaning.
- DO NOT let the cord come into contact with hot surfaces.

CONNECTION TO POWER

Before connecting, check that the voltage indicated on the appliance corresponds with the mains voltage in your home. If this is not the case, consult your dealer and do not use.

This appliance may be fitted with a non-rewireable plug. If you need to change the fuse in a non-rewireable plug, the fuse cover must be refitted. If the fuse cover is lost or damaged, the plug must not be used until a replacement is obtained. It is important that the colour of the replacement fuse cover matches the colour marking on the base of the plug.

If the plug has to be changed because it is not suitable for your socket, or becomes damaged, it should be cut off and appropriate plug fitted following the wiring instructions. The plug removed must be disposed of safely as insertion into a mains socket is likely to cause an electrical hazard.

For your own safety read the following instructions carefully before attempting to connect this unit to the mains.

You should only plug the appliance into a 220V-240V AC, 50Hz supply. Connecting it to other power sources may damage the appliance.

The wires in this mains lead are coloured in accordance with the following code:

BLUE = NEUTRAL

BROWN = LIVE

IMPORTANT

As the colours of the wire in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The blue wire must be connected to the terminal marked with the letter N or coloured black.

The brown wire must be connected to the terminal marked with the letter L or coloured red.

9

No connection is to be made to the earth terminal of the plug. If a 13 Amp (BS1363/A) plug is used, a 3 Amp fuse must be fitted, or if any other type of plug is used, a 3 Amp fuse must be used.



Caution
To prevent electric shock disconnect from the mains before removing the cover

This equipment must be disconnected from the mains when not in use. Do not allow this unit to be exposed to rain or moisture.

Technical Specifications


Voltage: 220-240V

Frequency: 50Hz

Power: 45W

We apologise for any inconvenience caused by any minor inconsistencies in these instructions, which may occur as a result of product improvements and development.

10



PRODUCT GUARANTEE

This product is guaranteed against manufacturing defects for a period of

1

Year

This product is guaranteed for twelve months from the date of original purchase. Any defect that arises due to faulty materials or workmanship will either be replaced, refunded or repaired free of charge where possible during this period by the dealer from whom you purchased the unit.

The guarantee is subject to the following provisions:

- The guarantee does not cover accidental damage, misuse, cabinet parts, knobs or consumable items.
- The product must be correctly installed and operated in accordance with the instructions contained in this manual. A replacement copy of this Instruction Manual can be obtained from www.argos-support.co.uk
- It must be used solely for domestic purpose.
- The guarantee will be rendered invalid if the product is re-sold or has been damaged by inexpert repair.
- Specifications are subject to change without notice.
- The manufacturer disclaims any liability for the incidental or consequential damages.
- The guarantee is in addition to, and does not diminish your statutory or legal rights.

Guarantor: Argos Limited
489 - 489 Avebury Boulevard
Central Milton Keynes
MK9 2NW
www.argos-support.co.uk

7



WASTE ELECTRICAL PRODUCTS SHOULD NOT BE DISPOSED OF WITH HOUSEHOLD WASTE. PLEASE RECYCLE WHERE FACILITIES EXIST. CHECK WITH YOUR LOCAL AUTHORITY FOR RECYCLING ADVICE.

8