


IMPORTANT!
RETAIN FOR FUTURE REFERENCE : READ CAREFULLY

If you need help or have damaged or missing parts, Please call the Customer Helpline: 03456 400 800

Fisher-Price™



Deluxe Travel Cot User Guide

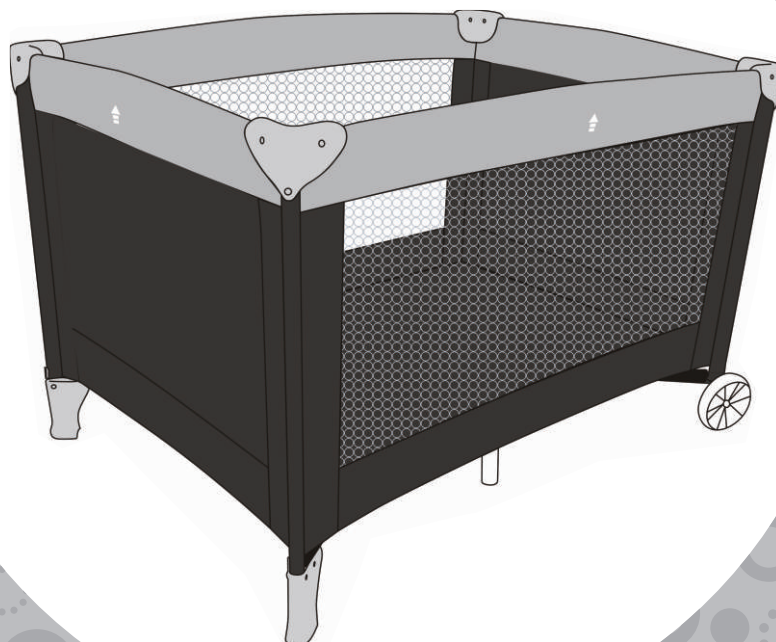

Cat.: 389/8484

Dimensions

100CM(L) X 74CM(D) X 74CM(H)

0-15KG



Safety and Care Advice

– Please read these instructions fully before starting assembly

- **WARNING** : Adult assembly required
- **WARNING** : Keep small parts out of the reach of children under 36 months because of possible choking hazard.
- **WARNING** : Be aware of the risk of open fire and other sources of strong heat, such as electric bar fires, gas fires, etc. in the near vicinity of the cot.
- **WARNING** : Do not use the cot if any part is broken, torn or missing and use only spare parts approved by the manufacturer.
- **WARNING** : Do not leave anything in the cot or place the cot close to another product, which could provide a foot hold or present a danger of suffocation or strangulation, e.g. strings, blind/curtain cords, etc.
- **WARNING** : All assembly fittings should always be tightened properly and fittings should be checked regularly and retightened as necessary.
- **WARNING** : Failure to extend the top rails and lock them securely creates a safety risk, ALWAYS check that the rails are fully engaged before use.
- **WARNING** : When the child is able to climb out of the cot, to prevent injury from falls, do not use the cot for that child any longer.
- **WARNING** : Do not use your travel cot without the mattress.
- **WARNING** : Do not use more than one mattress in the cot, recommended mattress size is 940 x 680mm.
- **WARNING** : Do not use any mattresses which are not approved by the manufacturer.
- **WARNING** : The depth of the mattress should not reduce the side height above it to less than 500mm.
- **WARNING** : Keep your travel cot away from trailing cords or flexes.
- **WARNING** : Do not leave your child unattended.
- **WARNING** : Only use the cot with one child at a time.
Do not move the product with the child inside.
- **WARNING** : Do not place the cot close to an open fire and other heat source.
- **WARNING** : Do not use the cot without base.
- **WARNING** : Ensure that the cot is fully erected and all the locking mechanisms engaged before placing your child in this cot.


This Travel cot is intended for children from birth to 24 months and weight up to 15 kgs.

This product is made in compliance with EN716-1 & -2:2008+A1:2013
EN12227: 2010

1.Parts List

If you have damaged or missing components,
Please call the Customer Helpline: 03456 400 800


Please check you have all the parts listed below

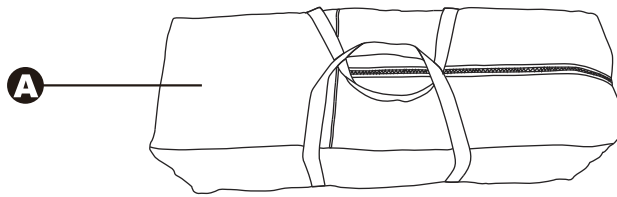

CARRY BAG



FRAME BODY

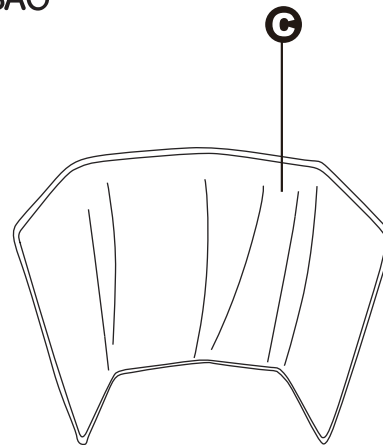


MATTRESS

2. Opening for use


Step1

Unzip the travel bag and remove the frame and mattress. Place the cot in the vertical position and open the touch fasteners to remove the mattress.

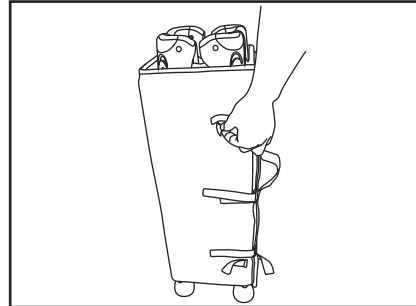


Step2

With the feet on the floor, pull the feet apart so that they are approximately 60cm/24" apart. Lift the short sides of the cot upwards until they lock into position.

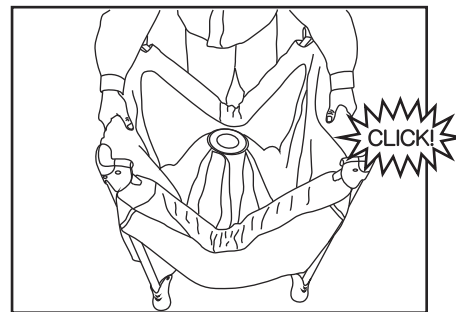


Step3

Now lift the long sides of the cot upwards until they lock into position. Check that all four sides have engaged correctly by pressing down on each arm at the centres. If you have difficulty locking the sides, lift the centre of the base a little higher (around 40 cm from ground) and start the process again.

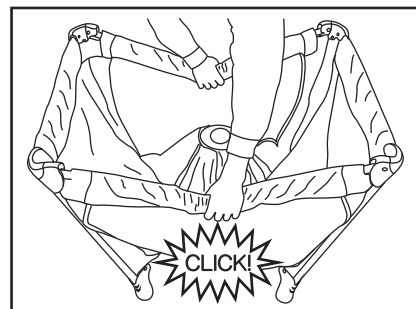


Step4

Now push the centre of the cot base downwards until it audibly locks into place.

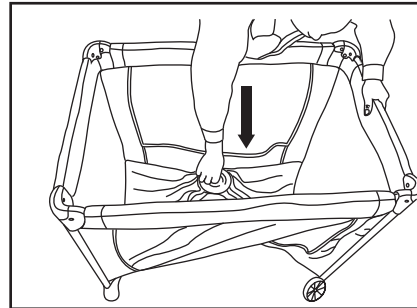

Step5

Place the mattress in the travel cot with the padded side up, align the touch fasteners on the mattress with those on the base and press down to ensure they are stuck together.



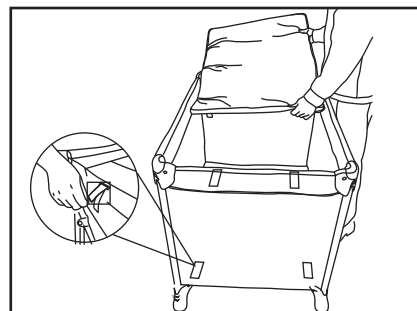


Note - The travel cot is ready for use, only when the locking mechanisms are engaged. Check carefully that they are fully engaged before using the travel cot

3. Folding

Step1




1. Loosen the fasteners on the back of mattress and take it out from the travel cot.
2. Hold the tube of either side in bottom at first (1).
3. Then lift the handle in the base under the mattress (2).
4. Pull the center of the base upwards (3).

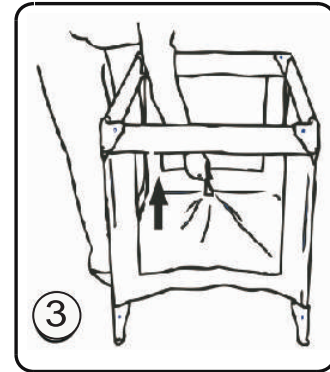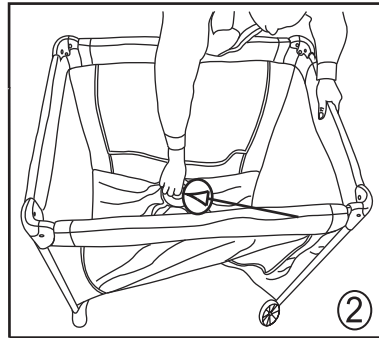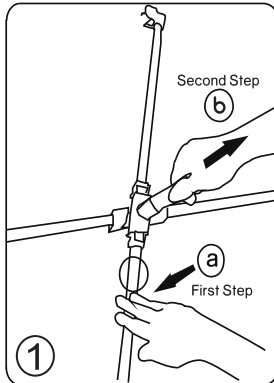

Notice: Ensure to hold the tube of either side in bottom (a) whilst lifting the handle up(b).



Step2

1. Lift the side rails slightly(1) and hold the lock in the middle of the rail (2) - Indicated with arrows
2. Hold the lock pressed whilst gently lowering the side rail(3)
3. Ensure that the side rail disengages on both sides of the mechanism.
4. Pull together the 2 supporting legs underneath the fabric to the center base as close as possible (4).

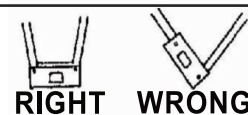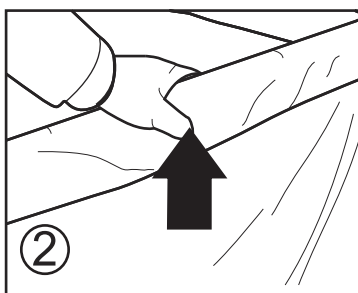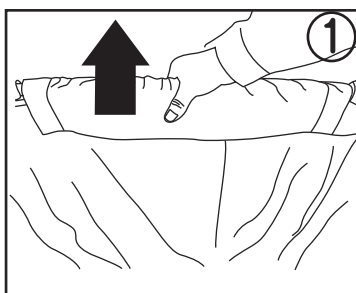

IMPORTANT NOTICE

Make sure the connection Joint is in correct position as shown, If not, push down the lock again and turn the lock joint until it reaches right position.

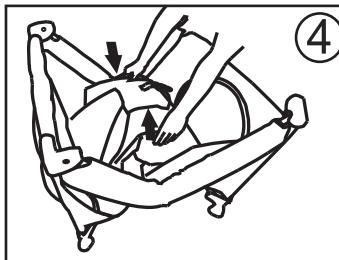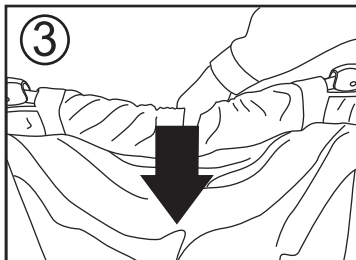


IMPORTANT NOTICE

In order to fold travel cot closed, pull together the 2 supporting legs underneath the fabric to the center base as close as possible.


Step3

Repeat this process with the short sides. check that all 4 sides have disengaged properly and then pull the centre of the base. If you have difficulty unlocking the sides, try to lift the centre of the base a little higher and start the process again.

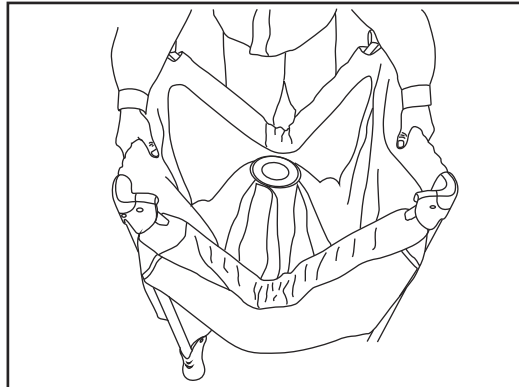


Step4

With the upper part of the travel cot in the closed position, push all 4 feet together to fold the travel cot closely.

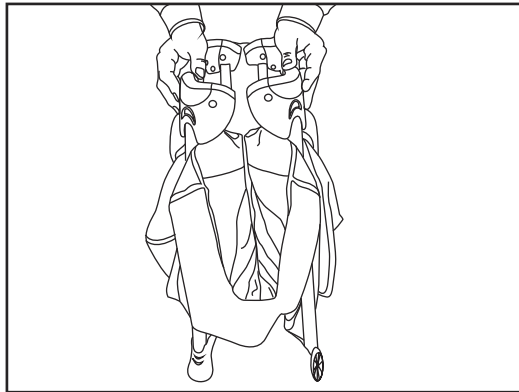

Step5

Wrap the mattress around the travel cot tightly with the padded section inside. Fasten the touch fasteners through the tabs and secure. Pull the travel bag over the travel cot and close the bag with the zip.

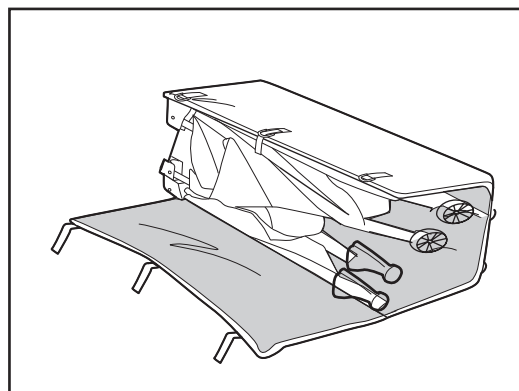

Care and Maintenance

Your child's safety is your responsibility

To clean the mattress base and travel cot fabric wipe it using a mild detergent and water. Never clean with abrasive, ammonia based, bleach based or spirit type cleaners. The travel cot must be dried thoroughly before use or storage.

Argos Limited

Avebury, 489-499 Avebury Boulevard, Milton Keynes, MK9 2NW

www.argos.co.uk

Customer Helpline: 03456 400 800

FISHER-PRICE and associated trademarks are owned by and used under license from Mattel.
©2015 Mattel. All Rights Reserved